INSTRUCTION













PUSH BUTTON OPERATED 6 LITRE SINGLE FLUSH

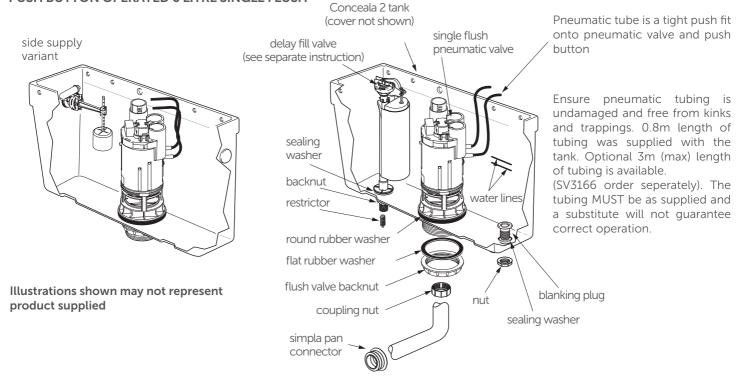

FLUSH PLATE OPERATED (DUAL FLUSH)

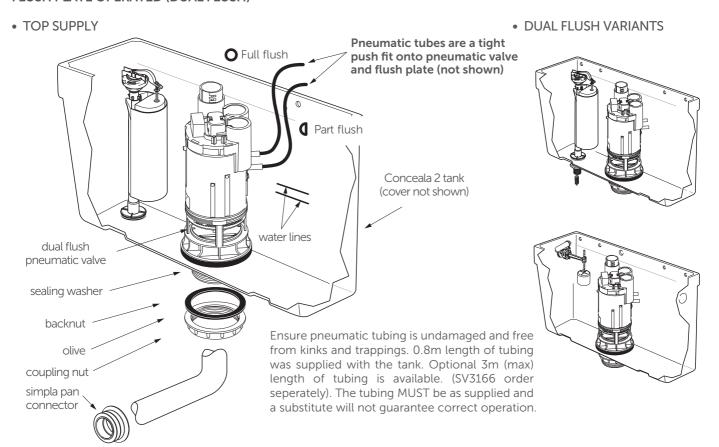

These instructions are for the following tanks, manufactured after June 2022:

E212567, E212467, S359967, S357967, S362267, S362367, S360467, S361767, S364067, S363667, S358967, S362067, S364367, S427067, S362167, S362667, EEM13590067

INSTRUCTION













OUTLET VALVE SETTINGS

If installed, turn outlet valve body anticlockwise and lift, parting it from outlet valve seat.

Adjust valve settings to chart below by moving adjusters up or down.

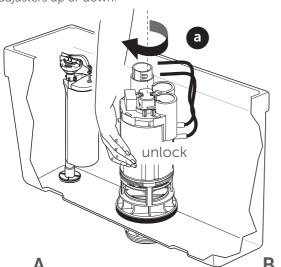


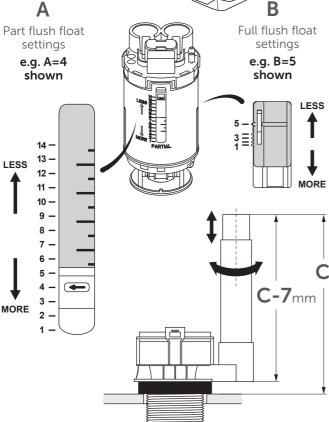

C is the overflow tube height measured from the base of the tank. Subtract 7 if measuring from the base of plastic cadge without the seal.

IMPORTANT NOTE

Not all wc pans are designed to flush at 4/2,6 litre. Check pan performance details before setting valve

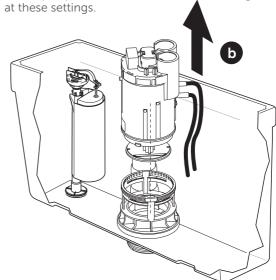

		\sim					
	inlet	Litre	Water line	A	В	С	
Single flush	Bottom	4	153	-	4	186	
	Bottom	4.5	153	-	3	186	
	Bottom	6	167	-	2	195	
	Side	4	153	-	5	186	
	Side	4.5	153	-	4	186	
	Side	6	167	-	2	195	
Dual flush	Bottom	4/2.6	153	3	2	186	
	Bottom	4.5/3	160	3	3	190	
	Bottom	6/4	178	2	3	205	
	Side	4/2.6	153	5	3	186	
	Side	4.5/3	160	5	4	190	
	Side	6/4	167	2	2	195	

Sensaflow outlet valve Setting

inlet	Litre	Water line	А	В	С
Side	6	167	-	3	195
Side	4.5	153	-	3	186
Side	4	153	-	5	186
Bottom	4.5	153	-	4	186
Bottom	4	153	-	5	182

Illustration may not reflect item as supplied.

All cistern components must be installed in accordance with UK water regulations. If in doubt please consult a suitably qualified professional.

CUSTOMER CARE HELPLINE

01482 496318

FAX LINE 01482 499611 email: customercare@idealstandard.com

ww10**0036**67

ver. 1.0/07.22