





Spare Parts / Ersatzteile / Pièces de recharge / Pezzi di Ricambio / Piezas de requesto /
 Parte de reposição / Reserveonderdelen / Reservdelar / Reservedeler / Varaosat /
 Vraosat / Varahlutir / Ανταλλακτικά / Yedek Parçalar / Náhradní díly / Náhradné diely /
 Nadomestni deli / Резервни части / Запчасти / Części Zapasowe / Piese de schimb /
 Rendelhető alkatrészek / Запасні частини / Reservní delovi / Резервни делови /
 Резервни делови / Atsarginių dalių / Tellitavad varuosad / Rezervju daļu

XX = AA, AD,...

Position




- 1 = A 960 872 XX
- 2 = A 960 231 XX
- 3 = A 962 998 NU
- 4 = A 963 432 NU
- 5 = A 960 462 NU
- 7 = A 960 998 NU
- 8 = A 960 587 NU
- 9 = A 963 427 NU
- 10 = A 960 871 XX
- 13 = A 963 154 NU
- 14 = A 860 458 NU
- 15 = A 860 415 NU
- 17 = A 961 810 NU (2x)
- 18 = A 960 412 NU

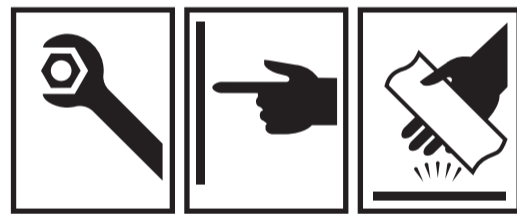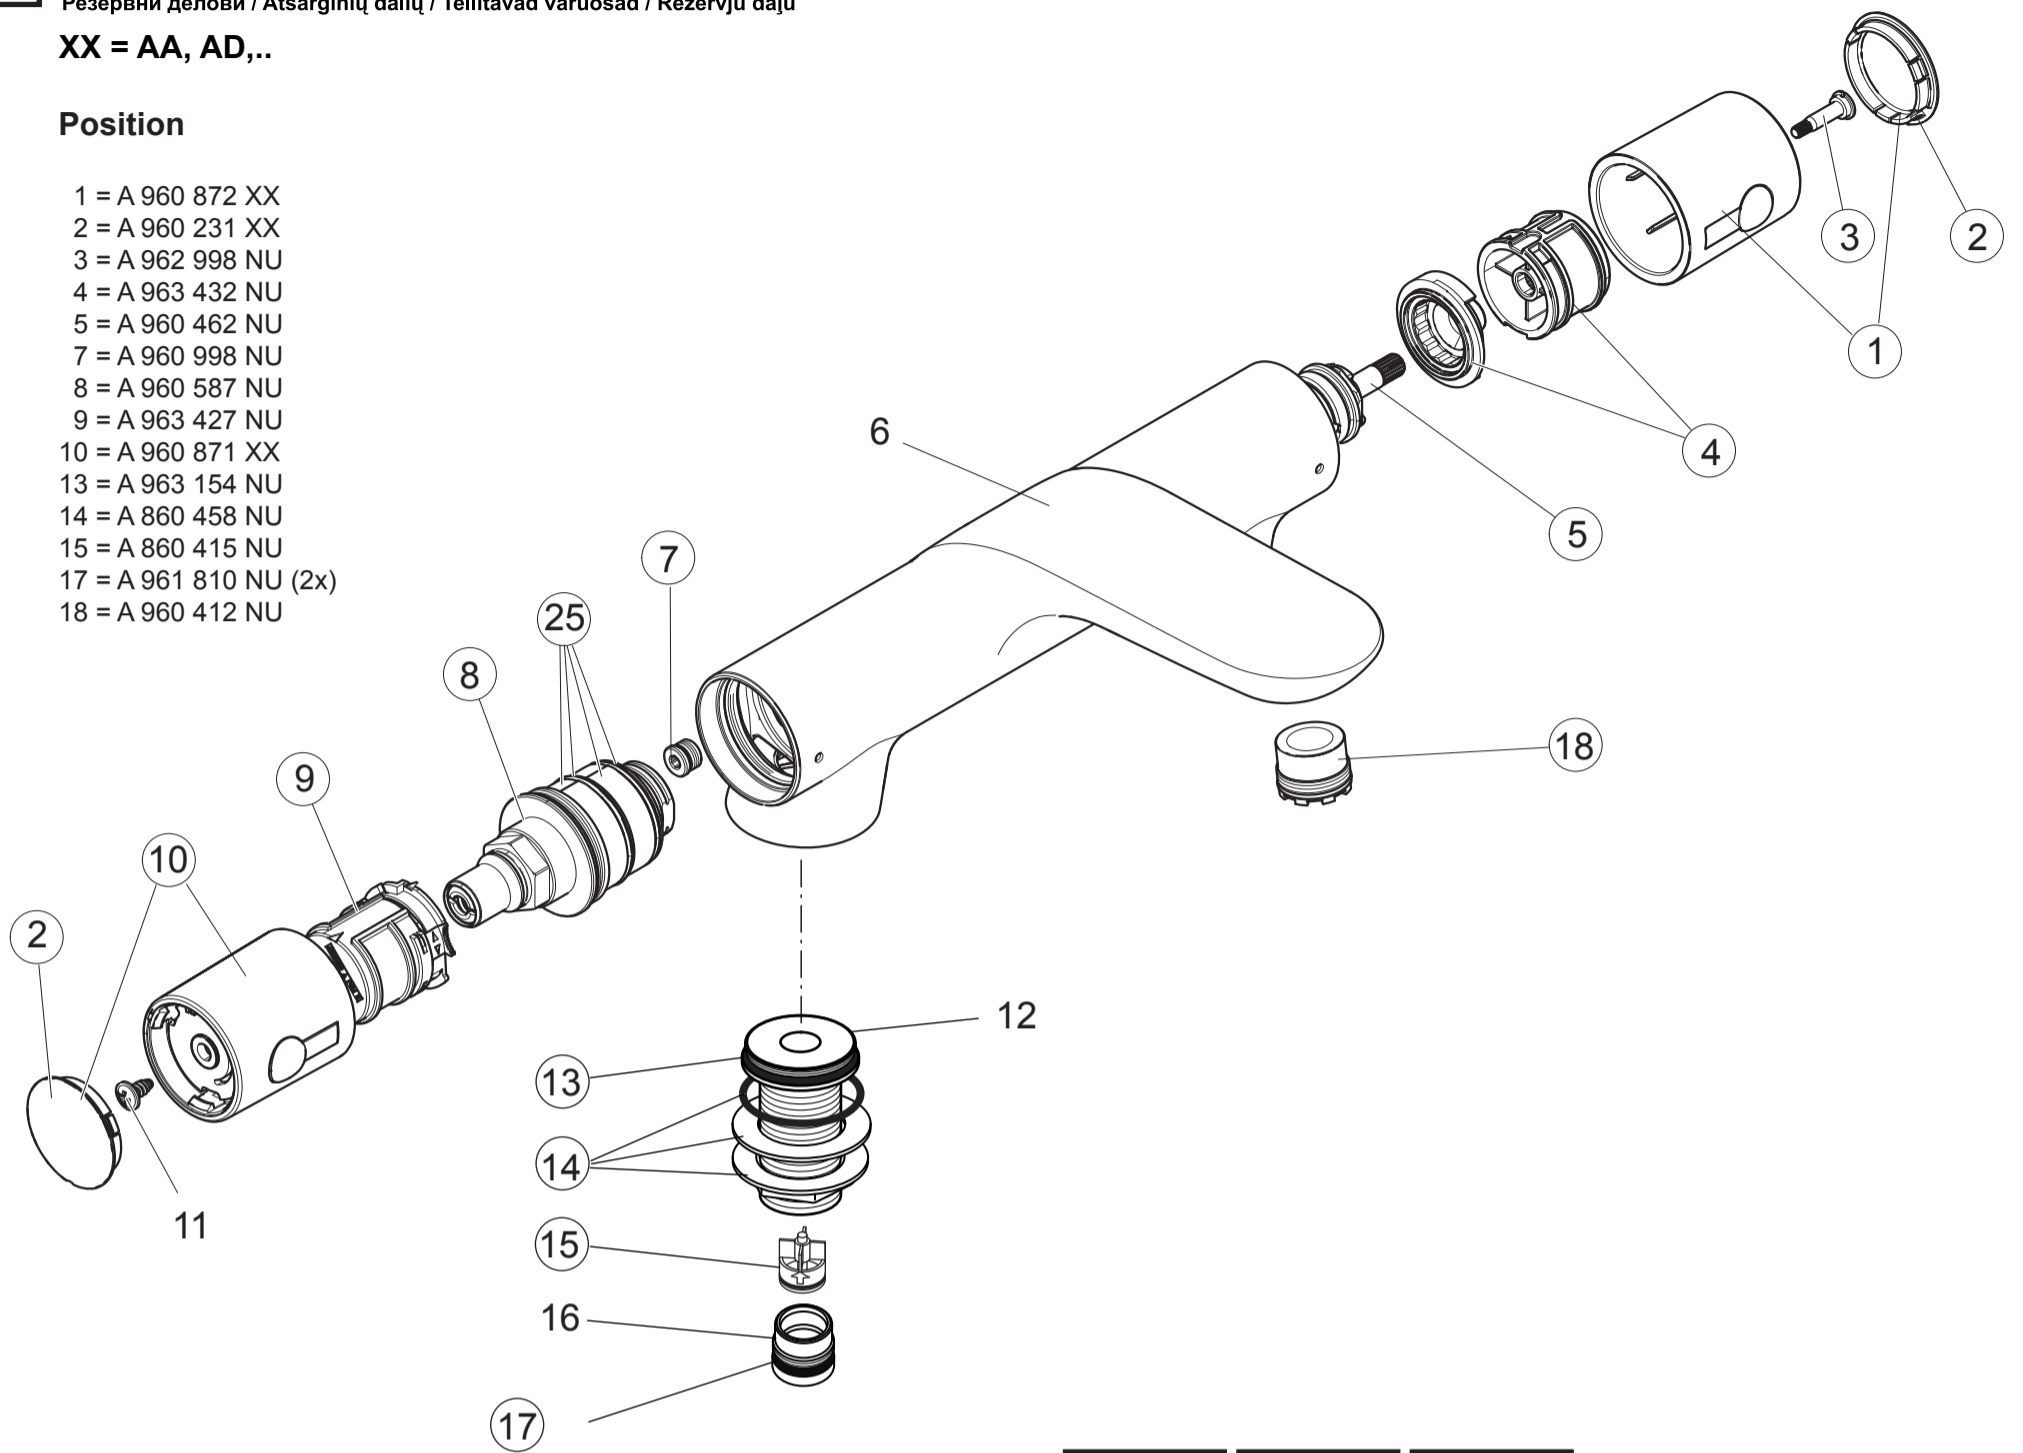

MELANGE


A 4283 ..



0811/ A 865 737
 (+A 865 612)

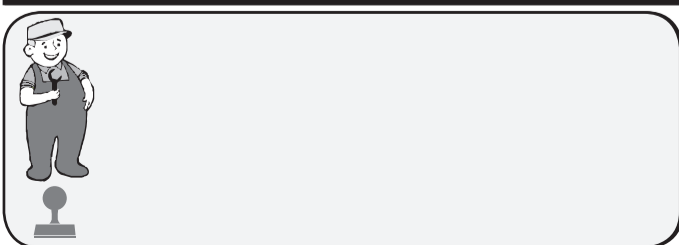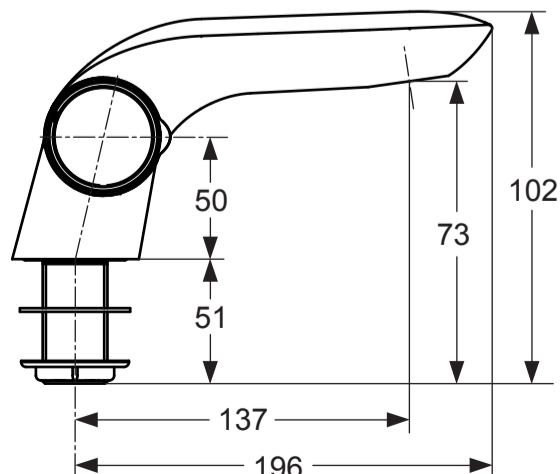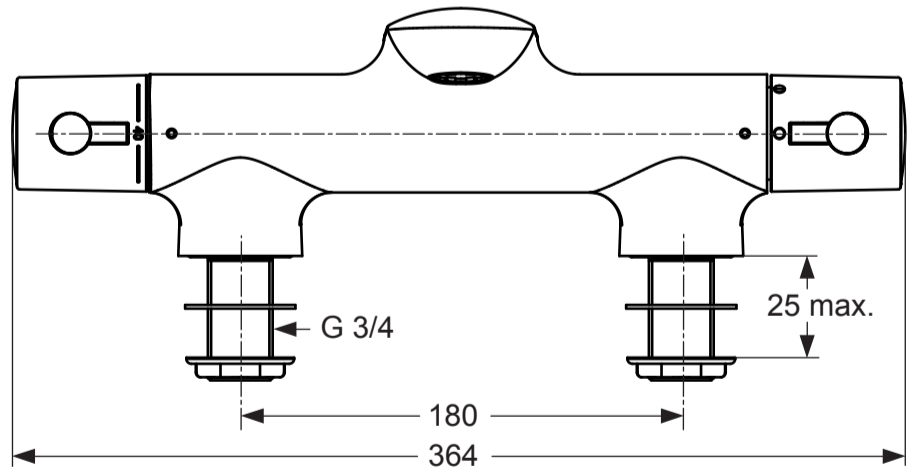

Ideal Standard International BVBA
 Chaussée de Wavre, 1789 - box 15
 1160 Bruxelles
 Belgium

www.idealstandardinternational.com

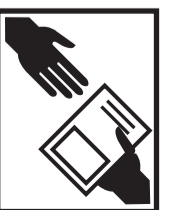

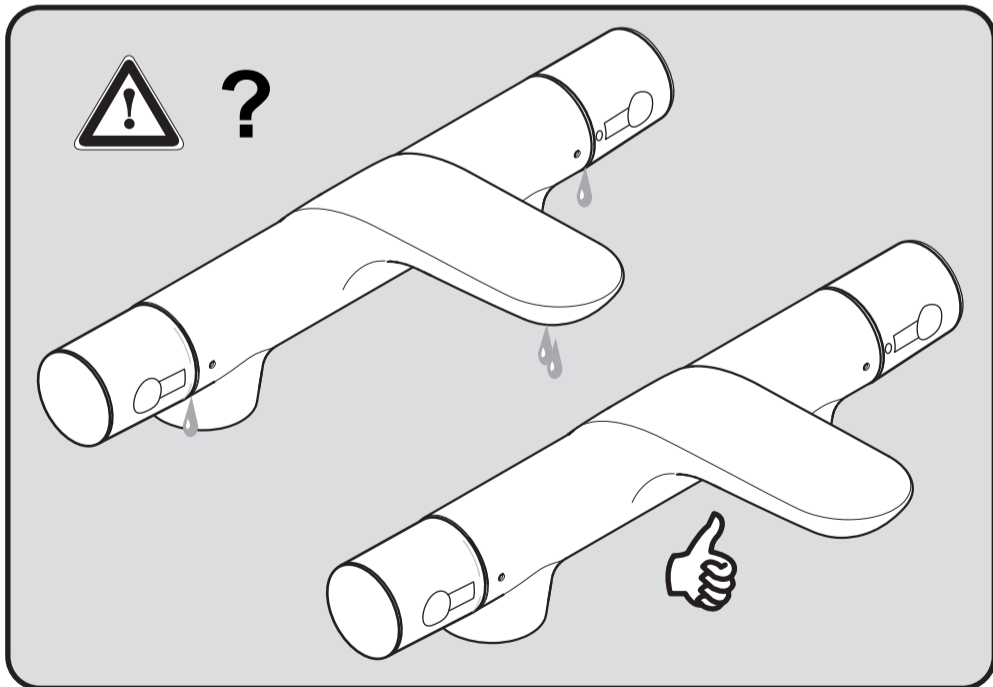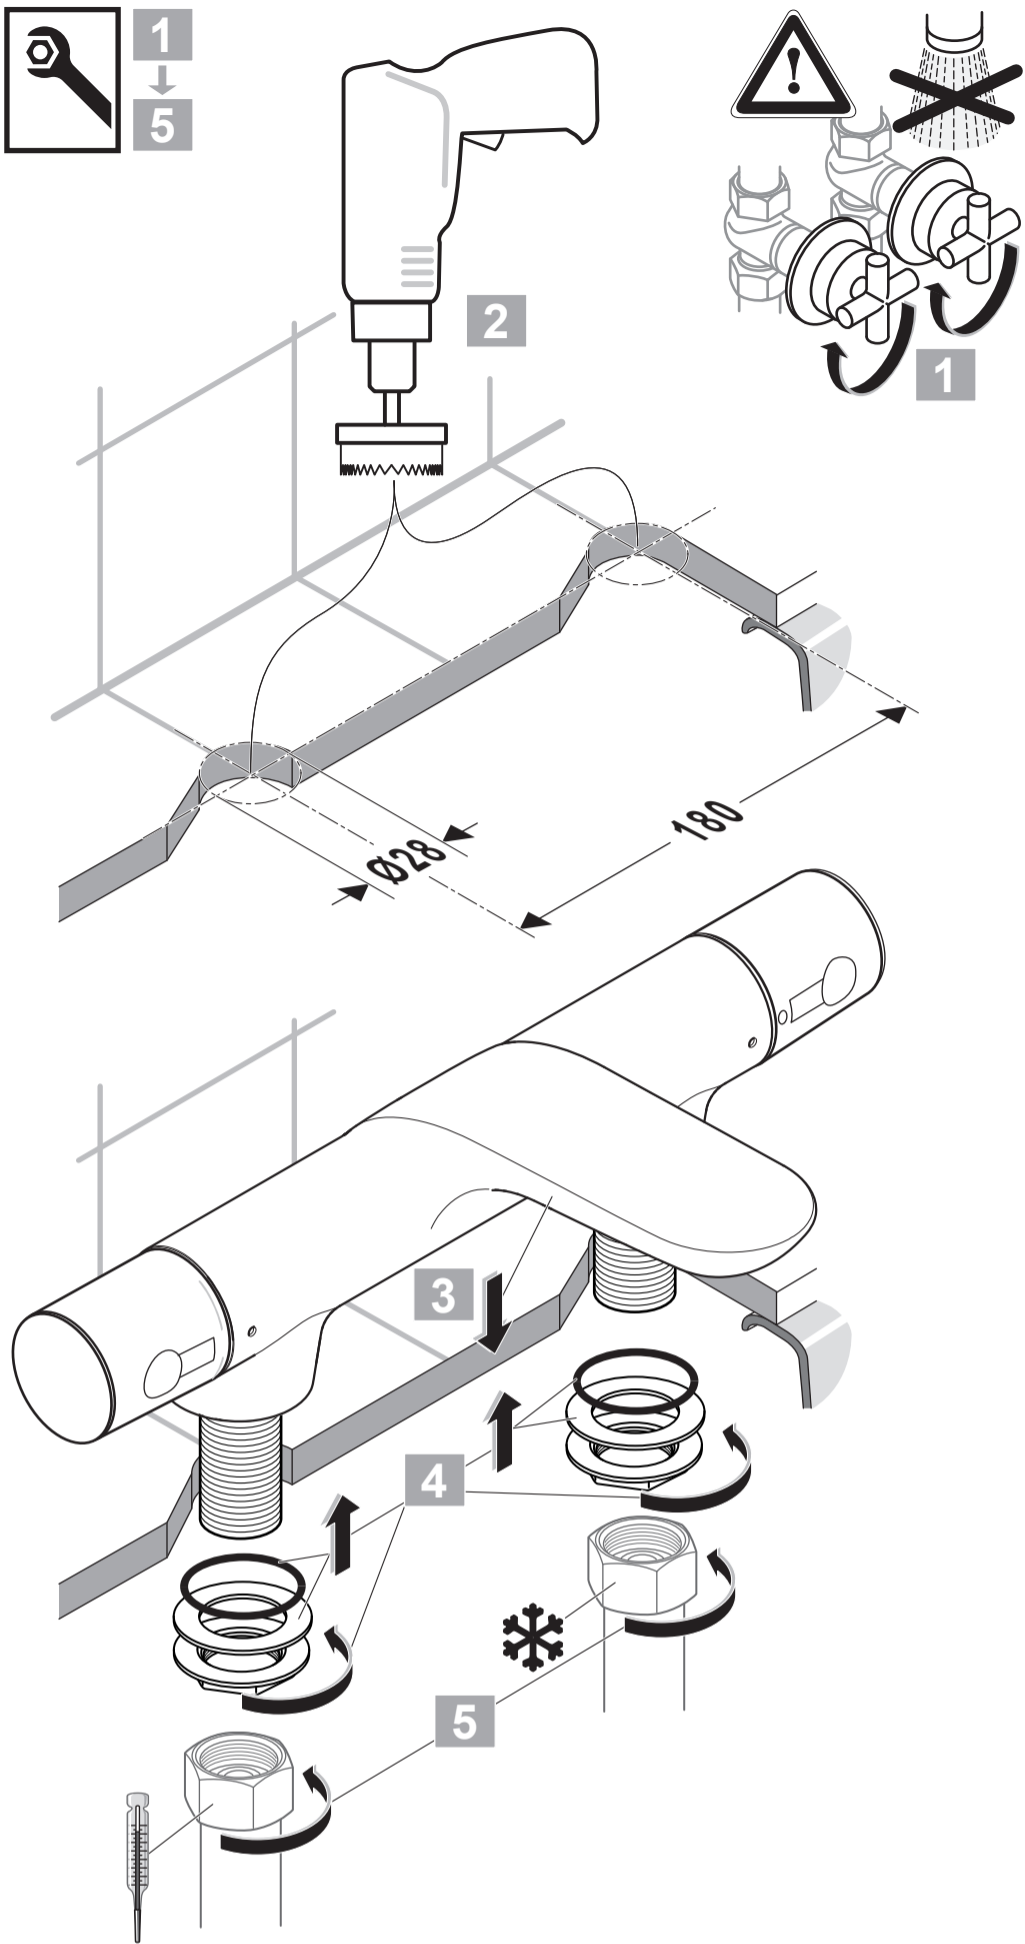

	P bar			
	T °C			l/min
				23

