


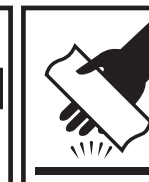

Spare Parts / Ersatzteile / Pièces de recharge / Pezzi di Ricambio / Piezas de requesto /
Parte de reposição / Reserveonderdelen / Reservdelar / Reservedeler / Varaosat /
Vraosat / Varahlutir / Ανταλλακτικά / Yedek Parçalar / Náhradní díly / Náhradné diely /
Nadomestni deli / Резервни части / Запчасти / Części Zapasowe / Pieze de schimb
/ Rendelhető alkatrészek / Запасні частини / Reservni delovi / Резервни делови /
Резервни делови / Atsarginių dalių / Tellitavad varuosad / Rezervju daļu




Ideal Standard

JOY



BC 805 ..

0621 / A 868 629

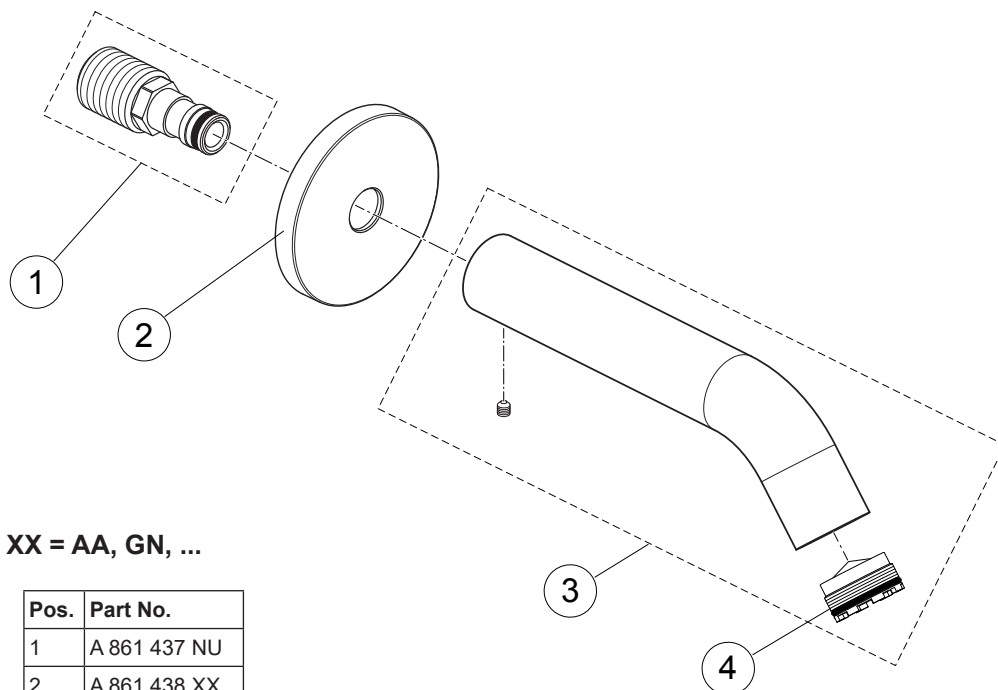


XX = AA, GN, ...





| Pos. | Part No. |
|------|--------------|
| 1 | A 861 437 NU |
| 2 | A 861 438 XX |
| 3 | A 861 450 XX |
| 4 | A 962 002 NU |

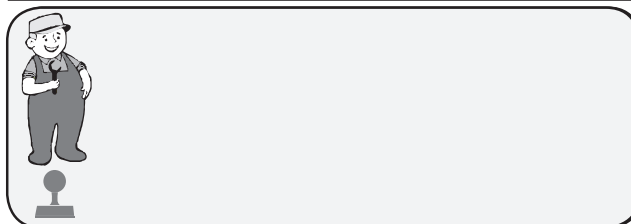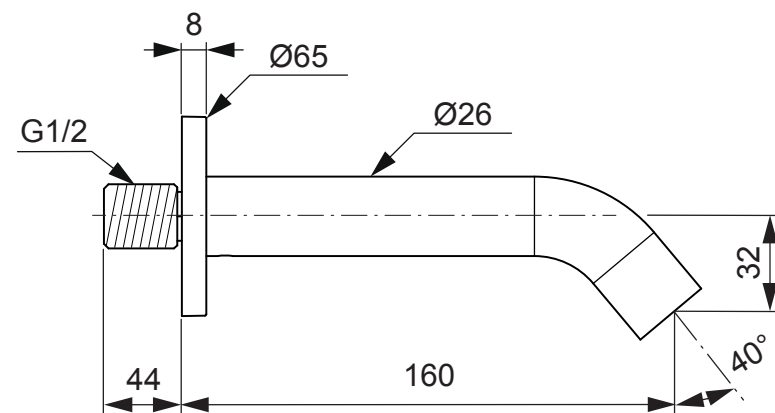

Ideal Standard International NV
Corporate Village - Gent Building
Da Vincilaan 2
1935 Zaventem
Belgium

www.idealstandardinternational.com

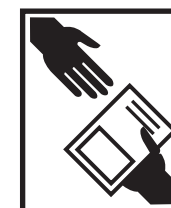

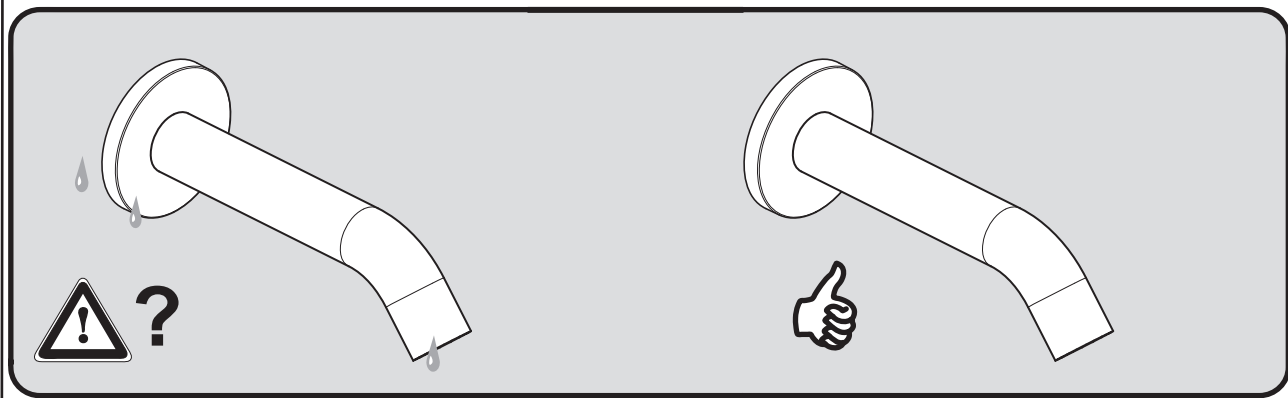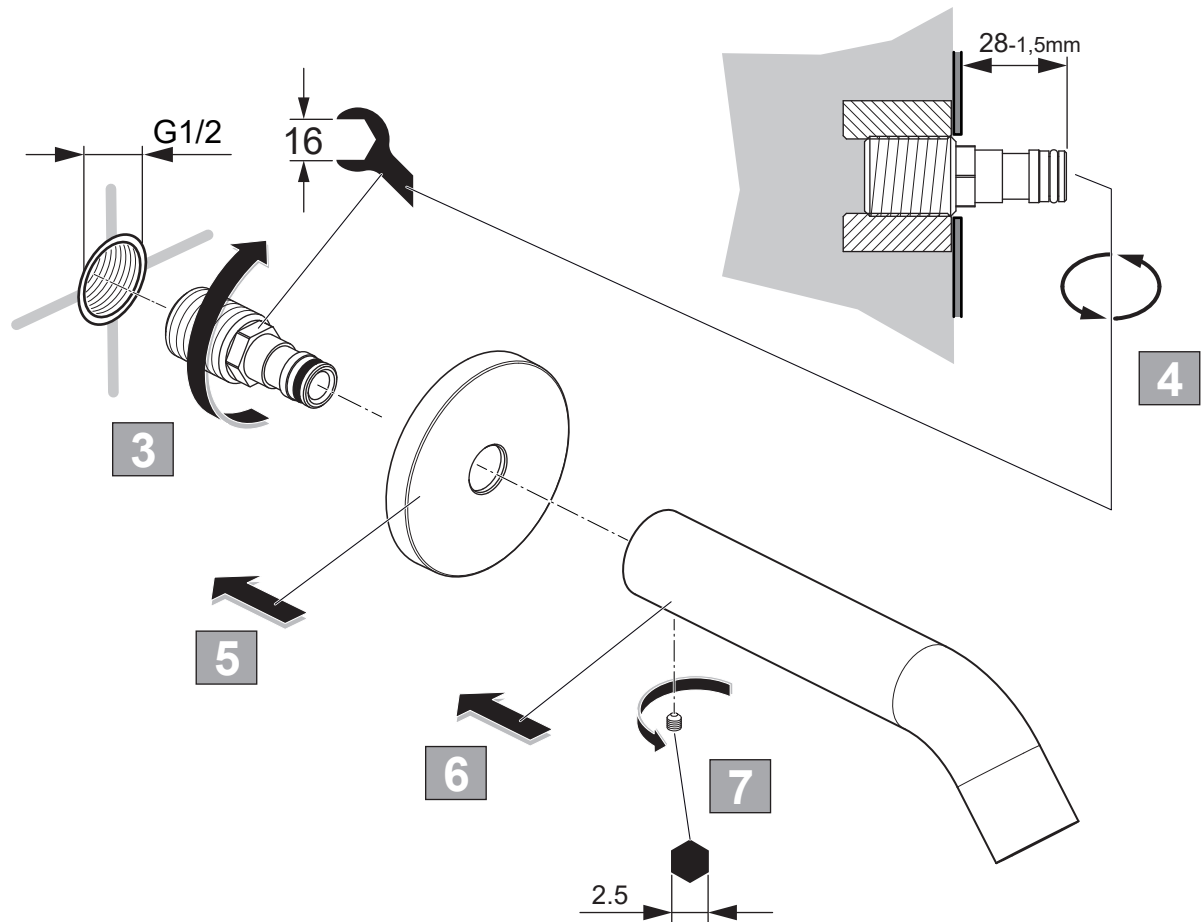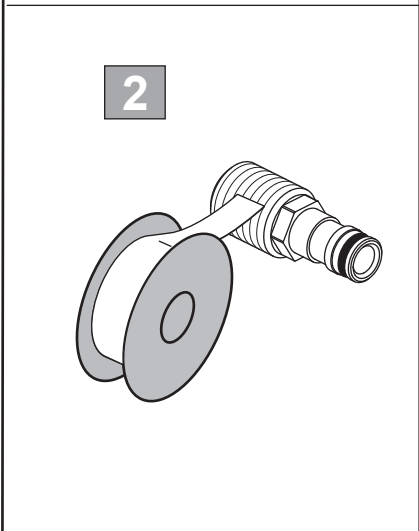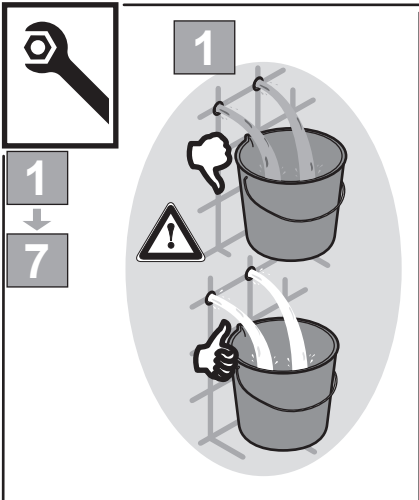

| | | | | | | | |
|--|----------|------------|----------|---------|--------|--|---------------------|
| | P | bar | MIN. 0,5 | | MAX. 5 | | Q (3 bar) |
| | T | °C | MIN. 10 | MAX. 80 | | | l/min |