
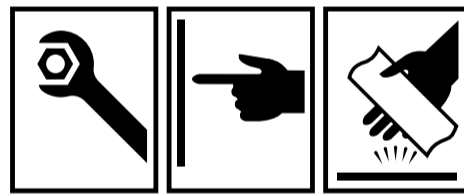


Ordering spares / Ersatzteil - Regelung / Pièces de rechange / Parti di ricambio / Lista de recambios / Onderdelen bestellen (NL/B) / Κωδικό Ανταλλακτικών / Bestilling af reservedele / Beställning av reservdelar / Bestilling av reservedeler / Резервни части / Запчасти / Części zapasowe / Piese de schimb / Rendelhető alkatrészek / Запасні частини / Резервни делови / Резервни делови / Atsarginių dalių / Tellitavad varuosad / Rezerves daļas / Náhradní díly / Náhradné diely / Yedek parça siparişi / Nadomestni deli

XX = AA, AD, .....

- 1 - B 961756 XX
- 1a - B 961761 XX
- 2 - B 961631 NU
- 3 - B 961326 NU
- 4 - A 861243 NU - LH  
A 861244 NU - RH
- 5 - B 961758 XX
- 6 - A 961640 NU
- 7 - B 964675 XX
- 8 - B 961346 NU
- 9 - B 961757 XX
- 10 - A 860901 XX
- 11 - B 961663 XX
- 12 - B 960500 NU
- 13 - B 961574 NU
- 14 - A 962728 NU
- 15 - B 961759 XX
- 16 - A 3306 XX
- 17 - B C770 XX
- 18 - B C774 XX

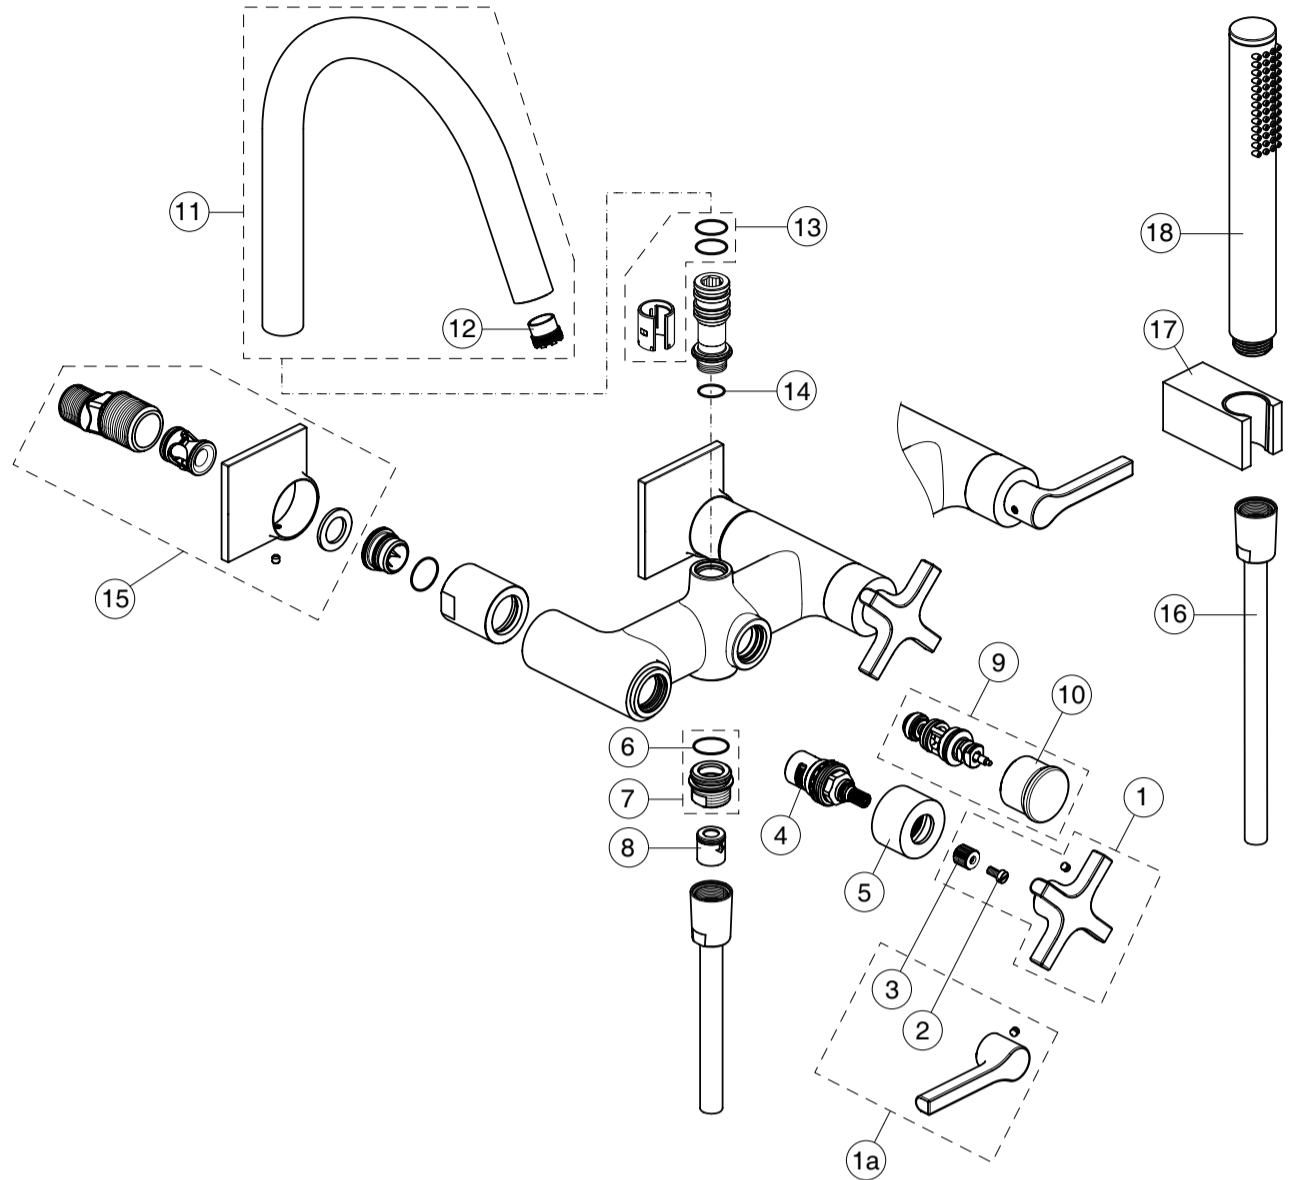


Ideal Standard


JOY NEO

12.2021 / B565162


	P bar				 <b>Q</b> (3 bar)
	T °C				
					 <b>I/min</b> 20    13

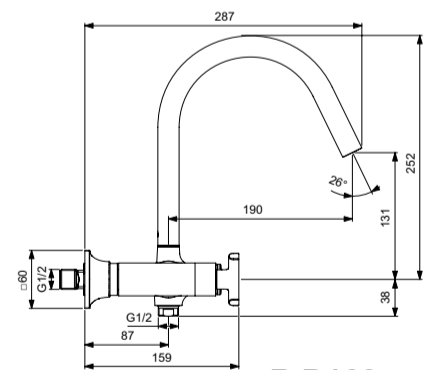

B D160 ..  
B D162 ..

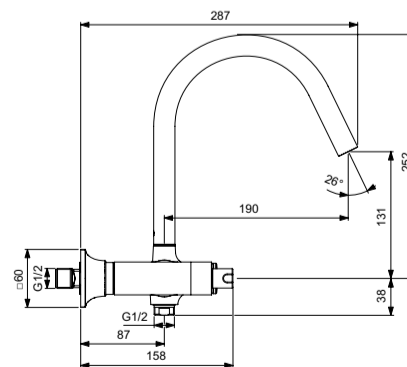

B D161 ..  
B D163 ..

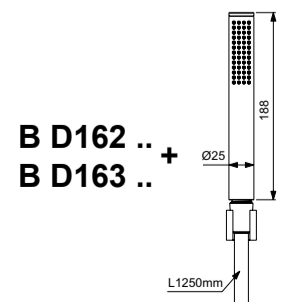

B D162 .. +  
B D163 ..



Ideal Standard International NV  
Corporate Village – Gent Building  
Da Vincilaan 2  
1935 Zaventem  
Belgium  
<http://www.idealstandardinternational.com>

