

CERAMIX

Bathroom Fittings

Water saving "CLICK" feature on single lever fittings



Installation Instructions

A5410 Single lever basin mixer

A5411 Single lever bidet mixer

E5412 Deck bath filler - 2 hole

E5413 Deck bath/shower mixer

with shower kit - 2 hole

INSTALLER: After installation please pass this instruction booklet to user

*Ideal
Standard*

The fittings covered by this installation and maintenance instruction should be installed in accordance with the water regulations published in 1999*, therefore, American Standard would strongly recommend that these fittings are installed by a professional installer

WATER SUPPLIES

Ceramix fittings are designed for use on systems where the water pressure is a minimum of 0.1 bar (0.2 bar for bidet) and they are suitable for use up to a pressure of 5.0 bar.

At pressures above 2.0 bar it will be found desirable to replace the flow straighteners with Neoparl aerator/flow restrictors (not supplied). These can be obtained by contacting the customer care team (see back cover) and quoting the following reference numbers:
A960321AA Basin and Bidet
A960309AA Bath fittings

It is recommended that the hot and cold supply pressures are reasonably balanced and from a common source.

CONNECTIONS

The connections to the basin and bidet fittings are 10mm copper tails.

Connections to the bath fittings are 3/4" BSP.

OPERATION

The basin and bidet fittings operate using a single lever mechanism which permits a more fluent control of water flow and temperature.

The bath fittings use quarter turn cartridges allowing a smooth operation which can be easily adjusted.

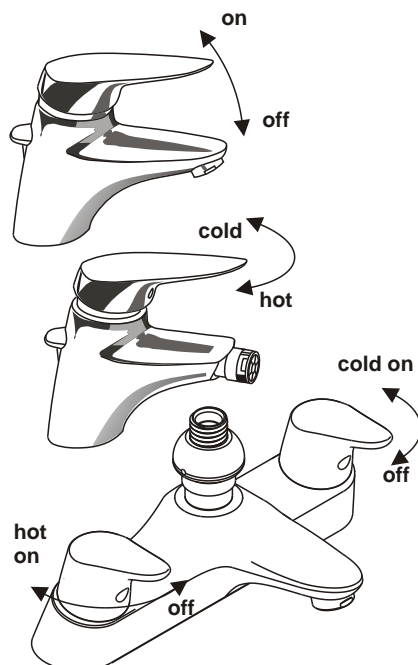


Figure 1

*A guide to the Water Supply (Water Fittings) Regulations 1999 and the Water Byelaws 2000, Scotland, is published by WRAS (Water Regulations Advisory Scheme) Fern Close, Pen-y-Fan Industrial Estate, Oakdale, Newport, NP11 3EH.
 ISBN 0-9539708-0-9

WATER ECONOMY

The Ceramix single lever basin and bidet fittings incorporate a water saving mechanism known as the "CLICK" cartridge. Commonly users of single lever cartridges were found to raise the flow control lever fully causing an over-use of water. The "CLICK" mechanism was developed as a tactile guide to make it easy to open the valve to a gentle rate when a lesser flow is required.

As the lever is raised an obvious resistance is felt when it is about half way up. Raising the lever past this resistance permits the cartridge to be opened fully.

The mechanism consists of two parts. An outer ring and a shoe (see fig 2). To remove, slide off shoe. The click ring can then be snapped off by placing a screwdriver under and prising upwards.

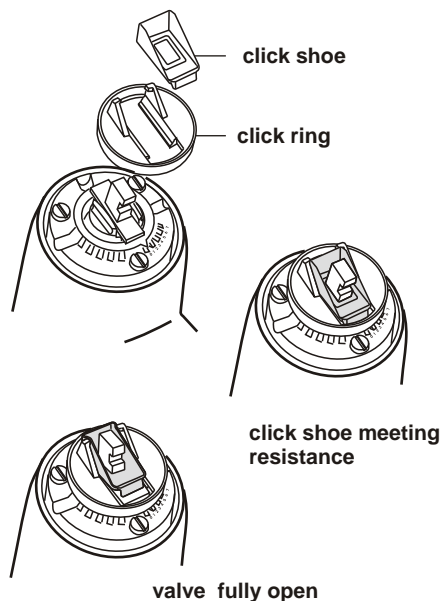


Figure 2

SETTING THE BLEND CONTROL

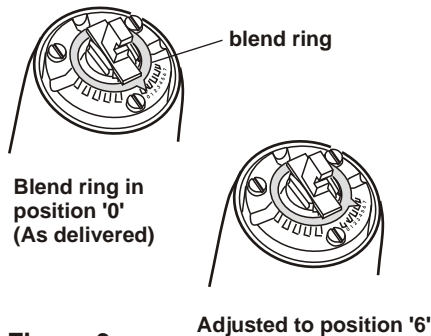


Figure 3

The Ceramix single lever basin and bidet fittings incorporate a blend control. This is a simple mechanical limit stop, located under the single lever handle, which restricts the angle to which the handle can be rotated towards the full hot position.

To set it, the hot water system should be operating and the hot water up to normal working temperature.

A thermometer will be required to measure the maximum blend temperature. (Refer to figure 5)

1. Remove the handle (1) & shroud (4).
2. Remove the two-part 'CLICK' mechanism (7) see opposite.
3. The blend ring, which is factory set in position '0' can then be prised up and rotated to the desired setting. There are 8 positions (0-7), the higher the number the lower the maximum blend temperature.
4. Push the blend ring back down to lock in its new position.
5. Operate the fitting and rotate the handle as far as it will go to the left. Measure the water temperature and make further adjustments as necessary.
6. Refit 'click' mechanism, shroud and handle.

The unique ceramic disc cartridge contains ultra smooth ceramic discs. They are so hard that they always remain sealed together, polishing one another in use, and sand, sediment and other waste borne matter cannot get between them or damage them. Even the hardest water has no effect and this means that the Ceramix fittings should give many years of efficient, trouble free service without the drip and liming up problems associated with traditional taps.

However, in the unlikely event of a failure, or any problem, simply exchange the cartridge. First check the outlet nozzle for possible blockage due to a build-up of debris from the pipework.

CARTRIDGE REPLACEMENT

Bath Fittings

1. Turn off both hot and cold water supplies
2. Remove index buttons (22)
3. Undo grub screws (21) using an Allen key
4. Pull off handles (20)
5. Slacken screw (23) and pull off drive insert (24)
6. Unscrew cartridge (25) and replace with the new one
7. Reverse the procedure for assembly

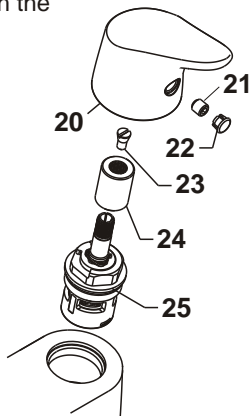


Figure 4

Basin and Bidet Fittings

1. Turn off both hot and cold water supplies.
2. Raise lever handle fully, remove plastic index cap (3) and undo grub screw (2).
3. Pull off shroud (4).
4. Remove click mechanism components (7).
5. Undo screws (5). The cartridge (6) can then be lifted out.
6. Ensure seals (8) have been removed with the cartridge.
7. Position new cartridge ensuring the location peg engages in the appropriate hole and reverse the procedure for assembly.

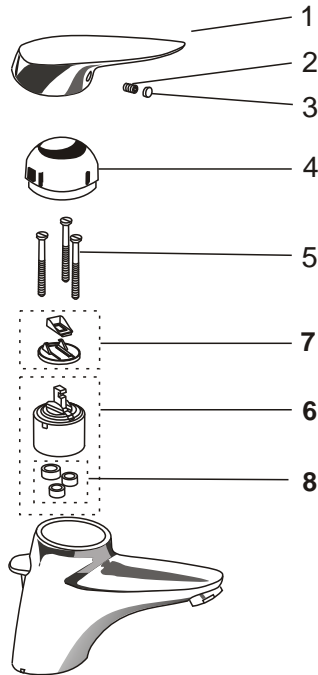


Figure 5

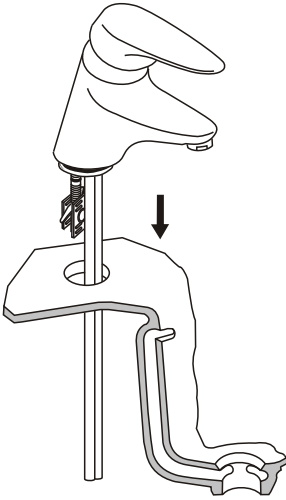


Figure 6

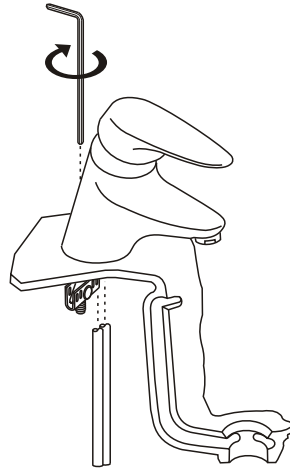


Figure 7

Basin / Bidet Monoblock Mixer

Connect fixation bracket to the underside of the mixer body by 2 - 3 threads only
THIS IS A LEFT HAND THREAD.

- Ensure fixation bracket is also only engaged by 2 - 3 threads.
- Hold the fixation bracket in the vertical position and place through the tap hole ensuring that the 'O' ring remains above the platform as this acts as a watertight seal between the two surfaces, (Figure 6).
- When positioned correctly, tighten the fitting using the Allen key provided. (Pass the Allen key to the user for future use). (Figure 7)
- Once tightened, position the vertical pop-up rod (16) through the same vertical hole and connect this to the horizontal rod using the connector (17) provided.

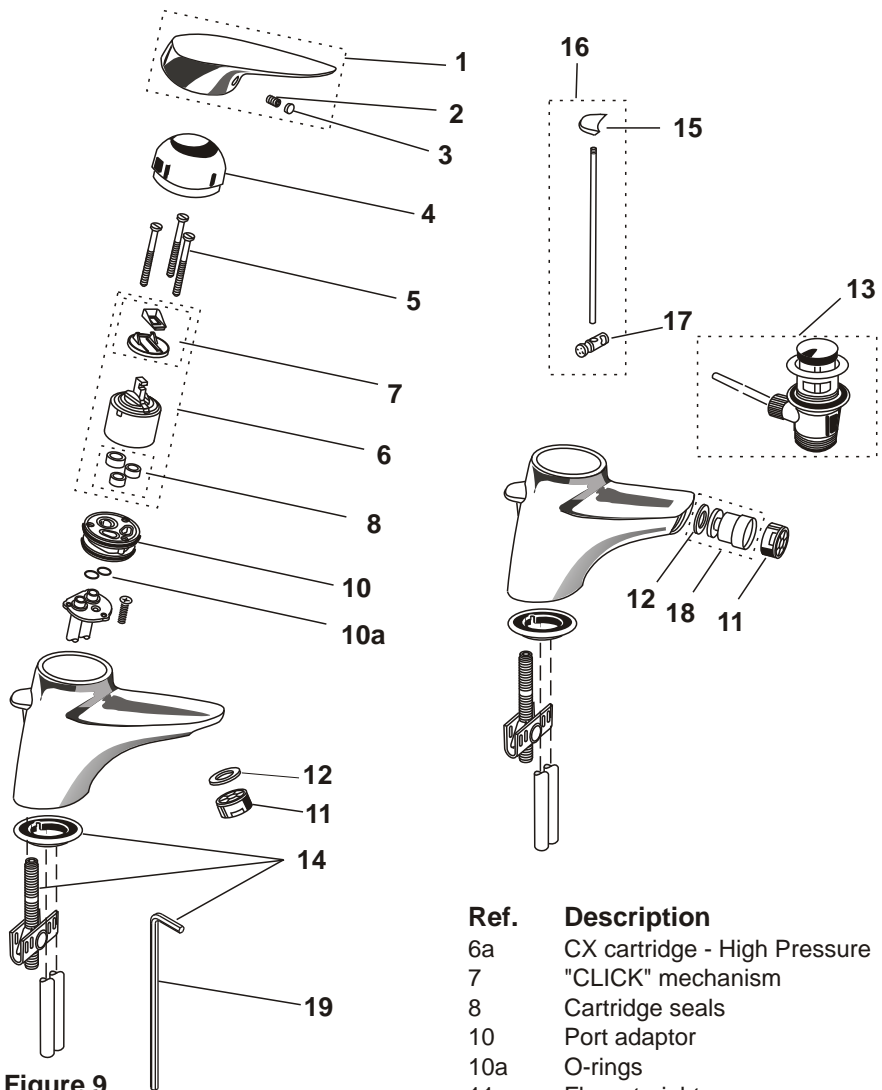


Figure 9

Ref.	Description
1	Ceramix single lever handle
2	Grub screw
3	Index button
4	Shroud
5	Cartridge screws M4 x 45.5
6	CX single lever cartridge

Ref.	Description
6a	CX cartridge - High Pressure
7	"CLICK" mechanism
8	Cartridge seals
10	Port adaptor
10a	O-rings
11	Flow straightener
12	Rubber washer
13	Pop-up waste
14	Fixing kit
15	Pop-up rod knob
16	Pop-up rod, knob and clamp
17	Clamp for pop-up rod
18	Bidet swivel
19	Allen key

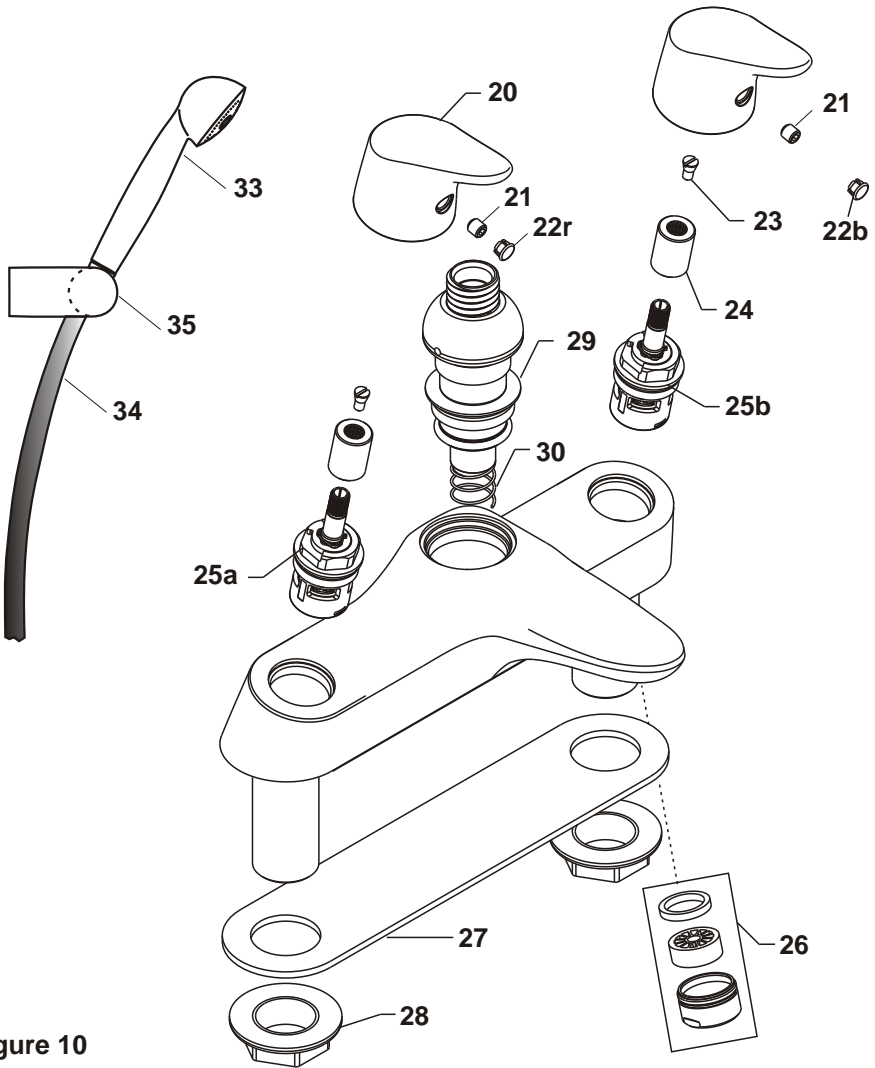


Figure 10

Ref.	Description	Ref.	Description
20	Ceramix dual control handle	26	Flow straightener
21	Grub screw	27	Gasket
22r	Red handle index	28	3/4" backnut
22b	Blue handle index	29	Diverter valve s/assy
23	Insert sleeve retaining screw	30	Diverter valve spring
24	Drive insert sleeve	33	Handspray
25a	¾ SE ceramic disc cartridge hot	34	Flexible shower hose
25b	¾ SE ceramic disc cartridge cold	35	Showering station

*Ideal
Standard*

Ideal Standard
The Bathroom Works
National Avenue
Kingston-upon-Hull
HU5 4HS
England

CUSTOMER CARE HELPLINE

0870 129 6086

CUSTOMER CARE FAX

01482 499611

E-MAIL

ukcustcare@aseur.com

Ideal Standard pursues a policy of continuing improvement in design and performance of its products.

The right is therefore reserved to vary specification without notice.

Ideal Standard is a division of
American Standard Plumbing (UK) Ltd

4357 12/03

E96543000